Copyright © Nokia Mobile Phones

Contents

Disassembly Instructions 6–1–2

Copyright © Nokia Mobile Phones

Disassembly Instructions

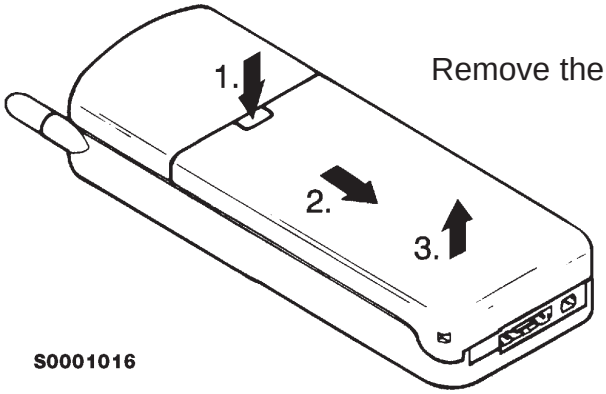

S0001016

Remove the battery.

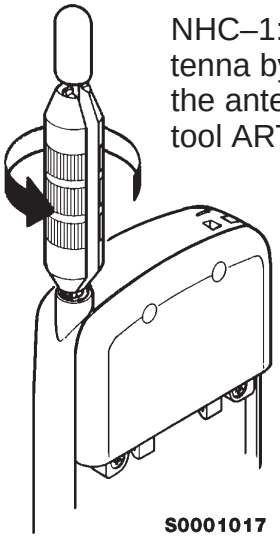
S0001017

NHC–1: Remove the antenna by unscrewing with the antenna extraction tool ART–3.

Now remove four back cover screws and remove the back cover by lifting it away.

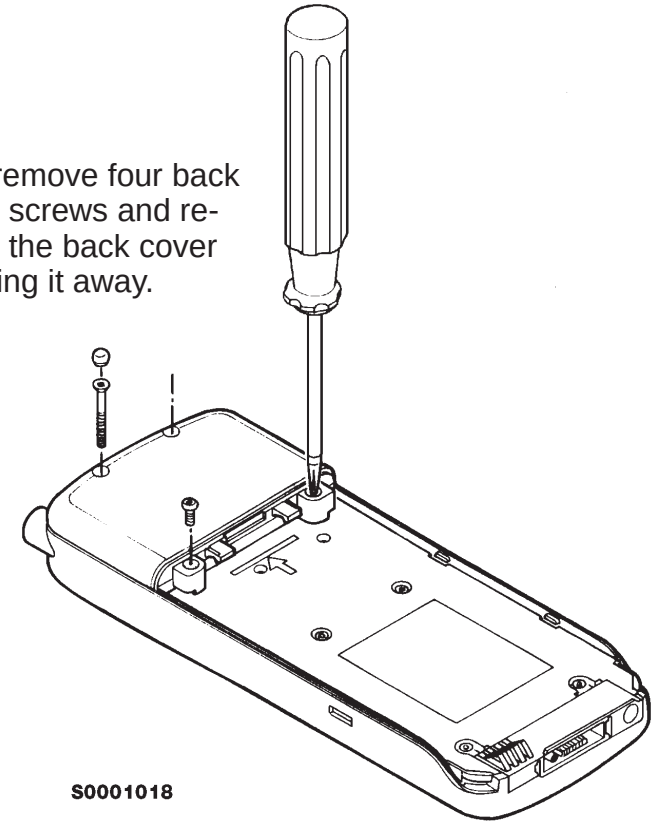
S0001018

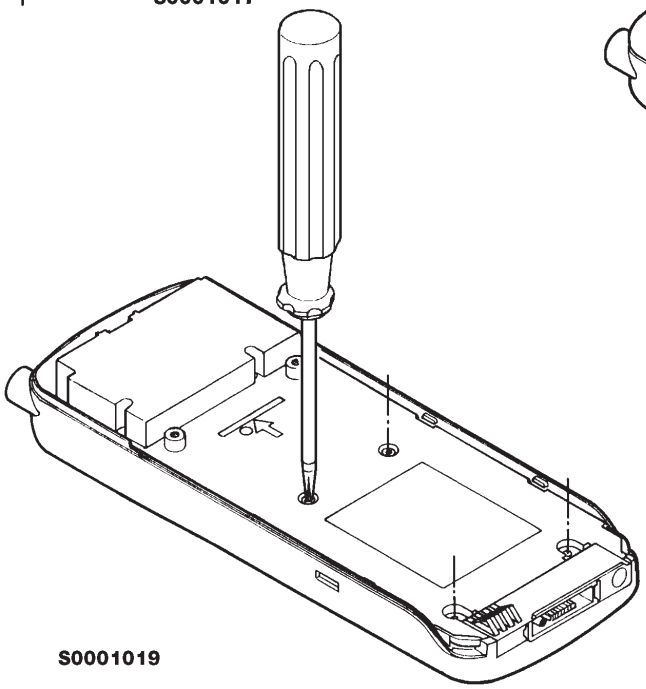
S0001019

Then remove four chassis screws.

Copyright © Nokia Mobile Phones

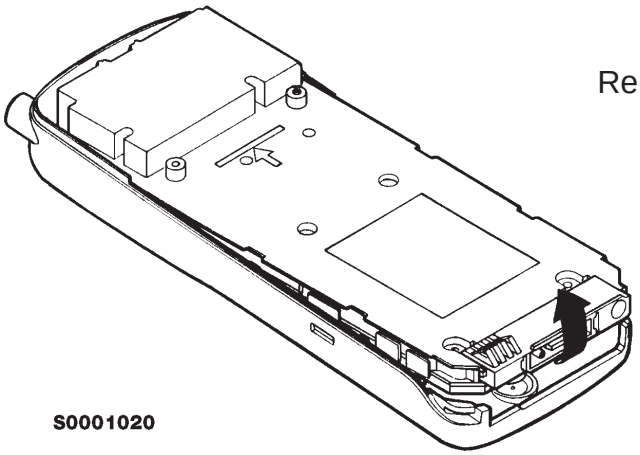

S0001020

Remove the chassis by lifting.

Turn around the chassis and open the display module a little.

Open the display module connector by pressing both sides of connector and slide off the display module cable.

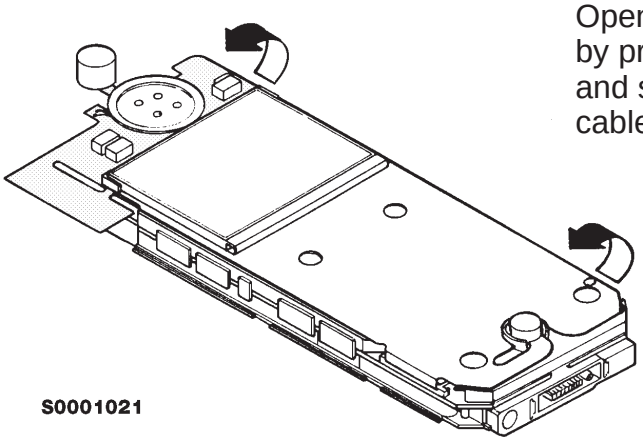

S0001021

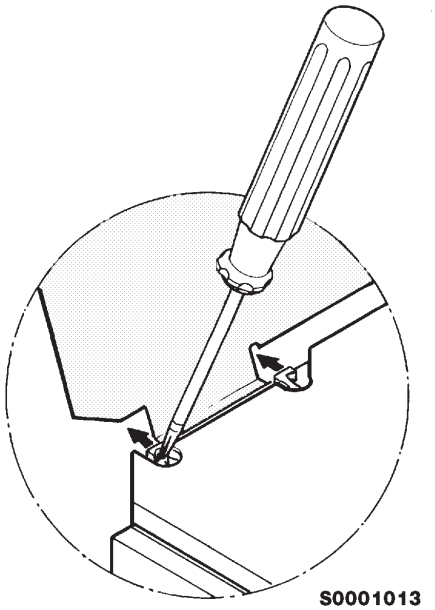

S0001013

Copyright © Nokia Mobile Phones

Turn chassis again and remove four (NHC–1) or two (NHC–4) module screws.

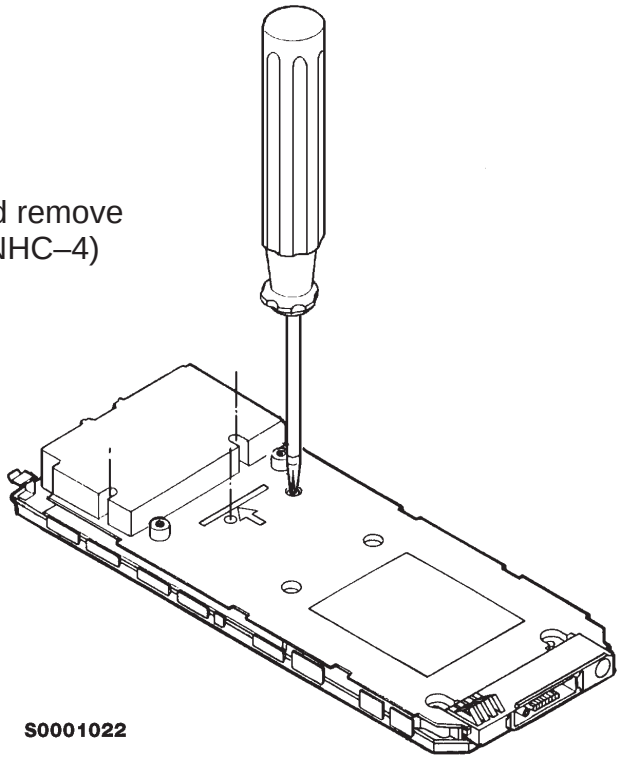

S0001022

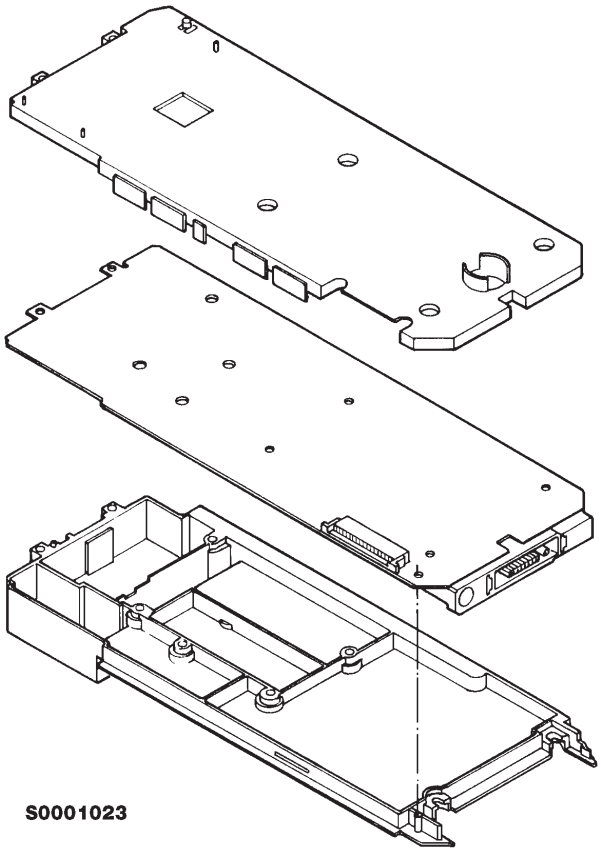

S0001023

Remove the plastic shield and throw it away (it is disposable).

Now you can separate the system module from the bottom shield by lifting it away.

Copyright © Nokia Mobile Phones

This service manual describes the Technophone NHC–3XB handportable Telephone for the North American Dual Mode TDMA system. The manual comprises technical descriptions together with service instructions.